

alpha Q25L

Operating instructions




Thank you for choosing Kullhaus.

Please read instructions before using the dehumidifier and keep it for future reference.

CONTENTS

Safety precautions	3-4
Safety Regulations for Service and Repair Work.....	5-6
Product Description	7
Control Panel Description	7
Technical Specifications	8
Placement	8
KULLSAVE	10
Operating Instructions	9-13
Cleaning and Maintenance	14
Replacing H13 HEPA filter	15
Troubleshooting	15
Storage	16
Conditions of Warranty	16
Smart Wi-Fi Connection Operation Guide	17-20

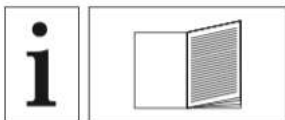

Only for home use / power source 220-240V/50Hz

Read the USER MANUAL carefully before operation.

This device is for home use only and not for commercial, industrial or outdoor use.

We reserve the right for any error in the text or images and any necessary changes made to technical data.



Service personnel are required to carefully read the USER MANUAL and SERVICE MANUAL before operation. Failure to abide by this warning could result in an explosion, injury and property damage.



This symbol indicates that this product should not be disposed of with general household waste. This applies throughout the entire EU. In order to prevent any harm to the environment or health hazards caused by incorrect waste disposal, the product must be handed in for recycling so that the material can be disposed of in a responsible manner. When recycling your product, take it to your local collection facility or contact the place of purchase. They will ensure that the product is disposed of in an environmentally sound manner.



This unit uses a flammable refrigerant.

If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.



Before putting the device into operation for the first time, place it in an upright position for at least 3 hours to stabilize the compressor fluids.

SAFETY INSTRUCTION

- Read the operating instructions carefully before using the dehumidifier & keep it for future reference.
- To avoid electric shock, fire or injury, please read the user manual carefully before using the appliance and keep it for future reference.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The unit is designed only for use with R-290 (propane) gas as the designated refrigerant.
- **THE REFRIGERANT LOOP IS SEALED. ONLY A QUALIFIED TECHNICIAN SHOULD ATTEMPT TO SERVICE!**
- Do not discharge the refrigerant into the atmosphere.
- R-290 (propane) is flammable and heavier than air.
- It collects first in low areas but can be circulated by the fans.
- If propane gas is present or even suspected, do not allow untrained personnel to attempt to find the cause.
- The propane gas used in the unit has no odour.
- The lack of smell does not indicate a lack of escaped gas.
- If a leak is detected, immediately evacuate all persons from the store, ventilate the room and contact the local fire department to advise them that a propane leak has occurred.
- Do not let any persons back into the store until the qualified service technician has arrived and that technician advises that it is safe to return to the store.
- No open flames, cigarettes or other possible sources of ignition should be used inside or in the vicinity of the units.
- Component parts are designed for propane and non-incendive and non-sparking. Component parts shall only be replaced with identical repair parts.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be disconnected from its power source during maintenance.
- Keep the unit away from fire, flammable, or explosive objects.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacture.

SAFETY INSTRUCTION

The appliance shall be stored in a room without continuously operation sources (for example: open flames, an operating gas appliance or an operating electric heater).

The appliance shall be stored so as to prevent mechanical damage from occurring.

Do not piece or burn, even after use.

Pipework shall be protected from physical damage.

THE MACHINE MAY ONLY BE INSTALLED IN A ROOM WITH MINIMUM FLOOR AREA OF 4 m².

Compliance with national gas regulations shall be observed.

Keep any required ventilation openings clear of obstruction.

The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.



Warning on Refrigerant R-290

- Failure to abide by this warning could result in an explosion, death, injury and property damage.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry-recognized assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

SAFETY REGULATIONS FOR SERVICE AND REPAIR WORK

Repairs must only be carried out by authorised service personnel and only using genuine spare parts. Please follow these warnings when servicing a dehumidifier with R290.

Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO² fire extinguisher adjacent to the charging area.

No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Checks to electrical devices


Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that there no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

Releasing refrigerant into atmosphere is strictly forbidden!

PRODUCT DESCRIPTION

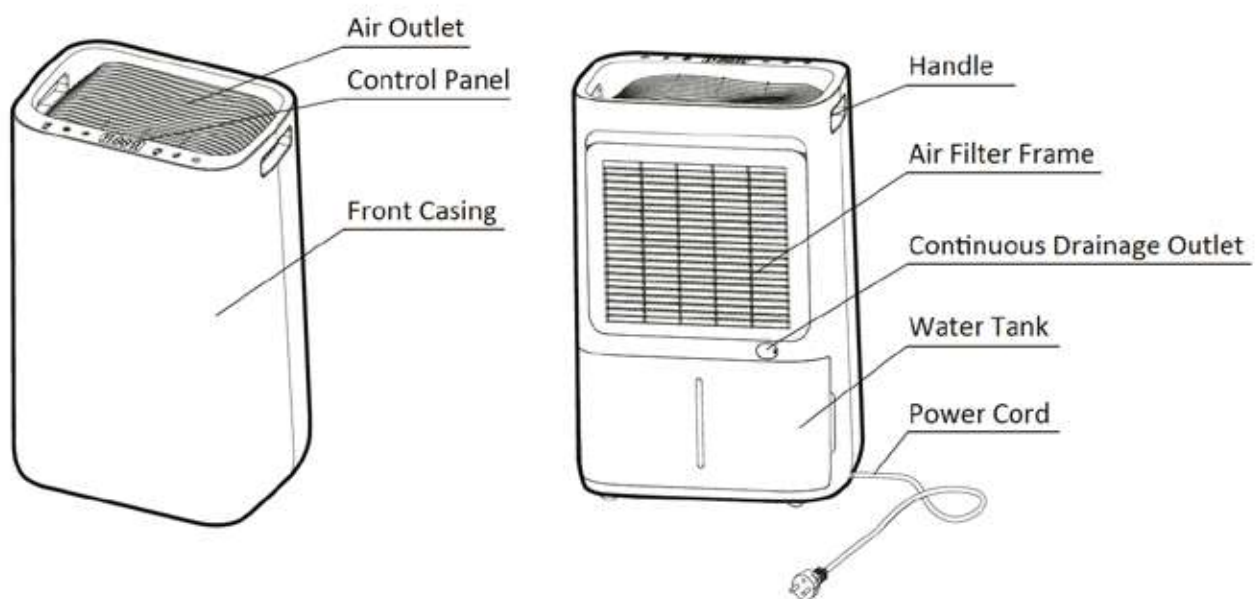

CONTROL PANEL DESCRIPTION

1. Power Button
2. Manual Button
3. Timer Button/Child Lock Button
4. Fan Speed Button/Wi-Fi Button
5. Auto Button
6. Mode Button/Ionizer Button



Laundry Drying Indicator

Sleeping Indicator

Air Purifying Indicator

Auto Indicator

High Fan Speed Indicator

Low Fan Speed Indicator

Ionizer Indicator

Wi-Fi indicator

Timer Indicator

Child Lock Indicator

Tank Full Indicator

Defrosting Indicator

TECHNICAL SPECIFICATIONS

Model		alpha Q25L
Power Supply		220-240V~ 50Hz
Dehumidifying Capacity	30°C 80% RH	25L/day
	27°C 60% RH.	15L/day
Rated Power (27°C 60% RH)		290 watts
Rated Current		1.63A
Air Flow	High	190 m³/h
	Low	160 m³/h
Noise Level	High	44 dB(A)
	Low	42 dB(A)
Fan speeds		2
Water Tank Capacity		4.5L
Operating Temperature		5°C~35°C
Timer		1~24 h
Refrigerant / Charge		R290 / 0,075 kg
Weight		15.6 kg
Dimension (WxDxH)		378 x 273 x 580 mm

The above technical data is for reference only. We reserve the right to modify them without notice.

PLACEMENT

Check the dehumidifier for any transport damage. In case of damage, you should contact the seller immediately.

- Make sure that the dehumidifier is standing firmly on a flat surface.
- Make sure that the mains lead is easily accessible and is not damaged by sharp edges or is crushed in any way during use.
- If any part of your house suffers from severe humidity, the dehumidifier can be placed there first and then moved to another part of the house later.
- Position the dehumidifier at least 50 cm away from surrounding objects for safety.
- **Never place the dehumidifier next to a radiator or heating appliance.**



OPERATING INSTRUCTIONS

Note:

- Ensure the supply power is in correspondence with the value on the nameplate.
- Ensure the water tank is correctly fitted before the dehumidifier can be switched on.
- If the dehumidifier is turned off and then turned back on again immediately, it will take approximately 3 minutes to reach full power (compressor back to work).
- If the dehumidifier switched off by a power cut, it will automatically switch back on once the power is restored.
- The dehumidifier works best at normal room temperature, its efficiency is reduced if the ambient temperature falls to below 15°C.

Switching On/Off the Unit



Connect the mains lead to socket.

Press Power button once to turn on the unit. By default, it runs on Manual Dehumidifying Mode.

Press Power button once again to turn off the unit.

Humidity Setting Control



Press Manual button once to enter Manual Dehumidifying Mode or to select desired level of humidity from CO-30%-35%-40%-45%-50%-55%-60%-65%-70%-75%-80%-CO.

Note: if ambient humidity lower than 30%, display shows LO.



if ambient humidity higher than 90%, display shows HI.



Timer Settings



At ON mode, press Timer button consecutively from 1-24h to select your preferred timer duration for automatic shut off setting. Its corresponding Timer indicator will be displayed on screen.

OPERATING INSTRUCTIONS

Fan Speed Option



Press the Fan Speed button to select your preferred fan speed setting of low and high to meet the different usage requirements.

Wi-Fi Function



Press and hold the Fan Speed button for 2 seconds to activate the Wi-Fi function and enter into the distribution network mode, during the network configuration, the Wi-Fi indicator flashes, after Wi-Fi connected, the indicator is on.

Note: Detailed operation, please refer to the manual «Smart Connection Operation Guide».

Note: Long press Fan Speed button for 2 seconds can disconnect the Wi-Fi.

Auto Dehumidifying Function



Press the Auto button to enter into the Auto Dehumidifying Mode, the unit runs automatically accordance to the ambient humidity detected below.

Ambient RH% detected	Compressor	Fan Speed Level
RH%>65%	Working	High Fan
55%≤RH%≤65%	Working	Low Fan
RH%<55%	Stop Working	Low Fan

KULLSAVE

The Energy Savings Smart Operation

When the target relative humidity is reached, the unit will operate only the fan in low speed for 1 minute, then will stop for 15 minutes. The fan will then run for 1 minute to check the relative humidity.

If the relative humidity has risen above the target humidity (HS)+1%, the unit will start operating again. If the relative humidity remains below the target level, the unit will fall back to sleep and only the fan works in low speed for about 1 minute and then stops for 15 minutes.

OPERATING INSTRUCTIONS

Multifunction Optional

- Laundry Drying Mode



Press Mode button once to select the Laundry Drying Mode, its corresponding Laundry Drying indicator will be displayed on screen. The unit works in continuous dehumidification with high fan speed for 6 hours then switch off automatically.

- Sleep Mode



Press Mode button twice to select the Sleeping mode, its corresponding Sleeping indicator will be displayed on screen. The unit works in previous mode but in low fan speed and 10 seconds later, all indicators will be off.

Note: At Sleeping Mode, press any button to wake up the unit first then to operate as usual.

- Air Purification Mode



Press Mode button 3 times to select the Air Purifying mode, its corresponding Air Purifying indicator and Ionizer indicator will be displayed on screen. The unit works with high fan speed without dehumidifying, ion function start working as well.

Note: Ion function can be switched off by pressing and holding the Mode button for 2 seconds.

Built-in Ionizer



Press and hold Mode button for 2 seconds to activate the ion function, built-in ionizer can produces negative ions to freshen up the air quality and to promote air purification through the elimination of airborne allergens and germs.

Note: If the fan stops working, anion function will automatically be deactivated.

OPERATING INSTRUCTIONS

Child Lock Function



To prevent the mishandling by young children, unit is equipped with a Child Lock function. Press Timer button for 2 seconds to activate or deactivate the Child Lock function.

Note: After activating the Child Lock function, the Child Lock indicator will be displayed on screen.

Automatic Shut Off




When the water tank becomes full during normal use, the unit shuts off automatically with tank full indicator on the screen and buzzer alarm goes off for 5 times.

Note: If water tank is removed or not placed properly, above phenomenon will appear also.



❶ Pull water tank out

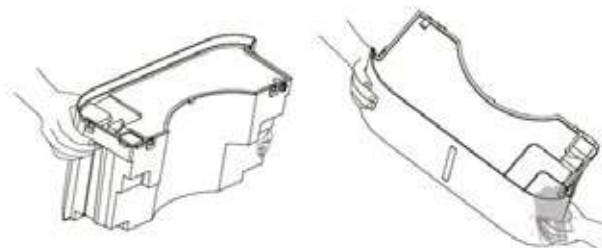

❷ Pour water away



❸ Restore the water tank

Automatic Defrost Feature



The unit is equipped with an automatic defrost feature. When room temperature is too low, compressor shuts off and unit runs on high fan speed setting until the frost has disappeared, no other setting can be made for this feature. Its corresponding indicator will be displayed on screen.



Memory Feature

When power failure and after recovering, the unit will work with the mode prior to the shutdown. Means the fan speed setting, humidity setting and working mode setting will be kept.

Continuous Drainage Option

Continuous drainage option allows easy removal of collected water instead of manually emptying from the water tank when the environment is very high humidity.

- 1. Remove the rubber plug covering the drain hose connection.
- 2. Connect a suitable drain hose (12mm inner diameter) through the drainage outlet. Ensure that the hose is secure and tight to prevent leakage.
- 3. Always make sure the drainage hose is not blocked or obstructed to maintain a smooth flow.

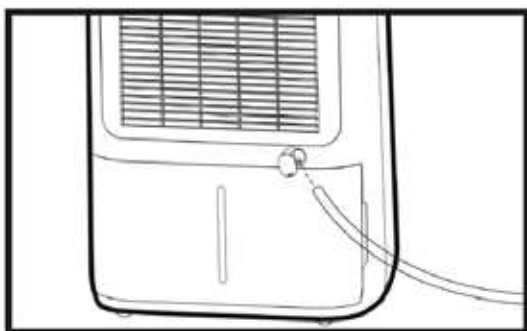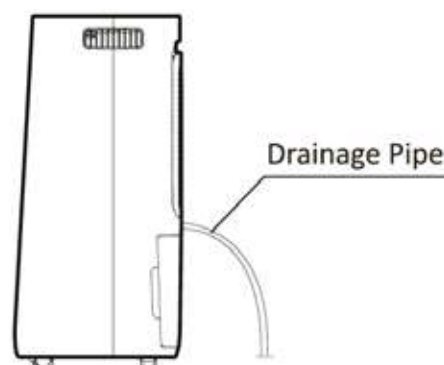


CLEANING AND MAINTENANCE

Cleaning the dehumidifier

To ensure the effectiveness of the dehumidifier, it is recommended to clean the unit at least every two weeks.

1. Turn the dehumidifier off and pull out the plug before cleaning.
2. Use a soft cloth to gently wipe the outer case to remove dust.
3. Vacuum clean the air inlet and outlet grilles of the dehumidifier.
4. Remove the water tank and wash it by hand using a mild detergent. Rinse it with Clean Water.


Note: Do not spray water directly onto the unit.

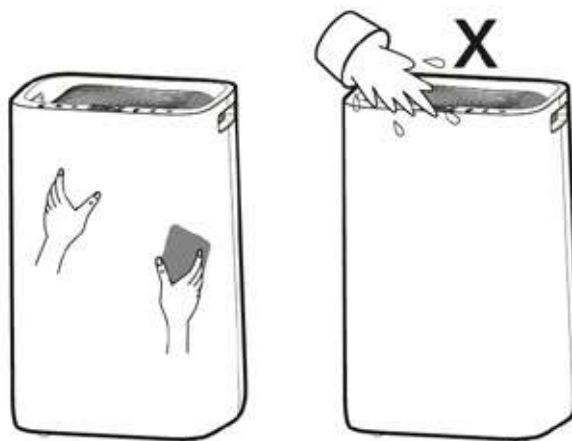

Cleaning the Air Filter

1. Remove the inlet frame from the back.
2. Wash the filter frame carefully in warm water, use a mild detergent if necessary.
Never wash the filter frame in the dishwasher.
3. Rinse the filter frame in clean water and let it dry before reinserting it.
4. Vacuum the H13 HEPA filter
Never clean the HEPA filter with water. It will be destroyed.
5. Fit the filter frame back onto the unit

Note: DO NOT use the dehumidifier without the Air Filter Frame in place.

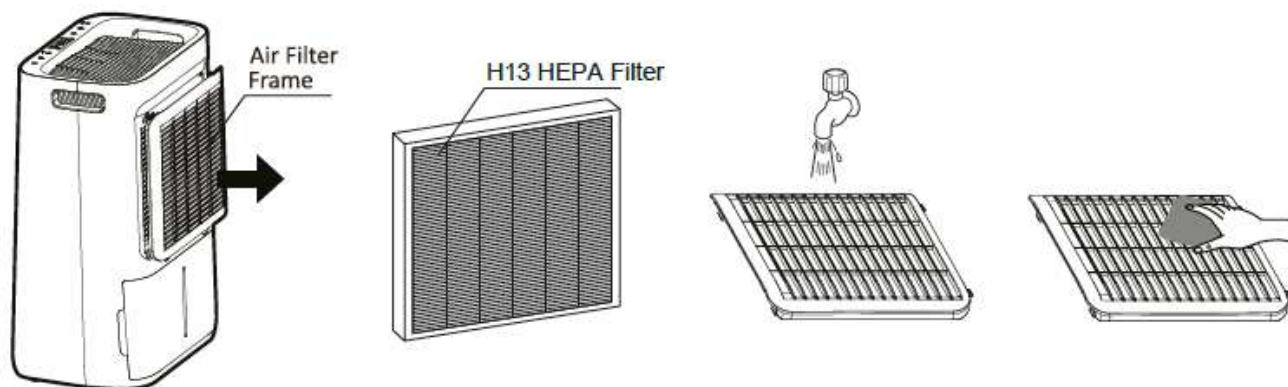

Replacing H13 HEPA filter

The H13 HEPA filter must be replaced when the color changes from white to gray or every 6 to 12 months (depending on the environment and the frequency of use). The HEPA filter should be cleaned by gently using a vacuum cleaner to suck away dust and debris from the surface of the filter. **Never clean the HEPA filter with water. It will be destroyed.**

The cleaning process must be done outside the room, otherwise the particles will disperse into the air.

If the HEPA filter remains black/grey and dusty after cleaning **then the filter has to be replaced**.

—► **Using a HEPA filter is optional.**

The dehumidifier can be used without the HEPA filter, which means it will simply dehumidify the air and not clean it. HEPA replacement filters can be purchased at www.sanihellas.gr

TROUBLESHOOTING

Check the following before contacting technical support.

PROBLEM	POSSIBLE CAUSE / SOLUTION
The dehumidifier will not switch on	<ul style="list-style-type: none">• Make sure that the mains lead is properly plugged in and that there is power in the wall socket.• The water tank is full or incorrectly fitted.• The set humidity level has been reached.• Power plug or cord damaged.
The humidity is not reducing	<ul style="list-style-type: none">• The dehumidifier has not been used long enough.• Make sure that the doors and windows are closed.• The ambient temperature is too low.• The surrounding humidity level is too low.• The air filter frame is dirty.• Exceed recommended room coverage area.• The ambient humidity level is lower than the desired humidity level set.
Unusual noises	<ul style="list-style-type: none">• The dehumidifier is tilted or standing on an uneven surface.• Make sure that the air filter is clean• Loose or foreign particles inside the unit.• Sound of flowing refrigerant.
Water in tank overflows	<ul style="list-style-type: none">• Water tank may be damaged.• Float of the water auto sensor is not in place.• Internal drainage passage is blocked or obstructed.
Display 	The control panel be locked. Press and hold the Timer button for 2 seconds to unlock the panel.
Display 	Ambient humidity is lower than 30%, will back to value display when the ambient humidity above 30%.
Display 	Ambient humidity is higher than 90%, will back to value display when the ambient humidity below 90%.
Error code	E1 Temperature sensor error. Contact customer care center. E2 Humidity sensor error. Contact customer care center.

Storage

STORAGE

If the dehumidifier will not be used for a long period of time, take the following steps:

1. Remove the plug from the socket and empty the tank, dry the tank and the dehumidifier completely, this may take a couple of days.
2. Clean the air filter as described above.
3. Ensure that the dehumidifier is in perfect condition for a safe use of the unit after a long period of storage.
4. Pack the device with the suitable packaging.
5. Store the dehumidifier in a dust-free and out of direct sunlight location, preferably covered with a sheet of plastic.

CONDITIONS OF WARRANTY

There is a two-year warranty on your dehumidifier from the date of purchase.

The following applies:

1. Any repairs or replacement of components during the warranty period will be not result in an extension of the warranty period.
2. The warranty will expire if any alterations have been made, not genuine components have been fitted or if the dehumidifier has been repaired by a third party.
3. Components subject to normal wear and tear, such as the air filters, are not covered by the warranty.
4. The warranty is only valid on presentation of the original, unaltered, and date-stamped purchase receipt.
5. The warranty is not valid for:
 - Damages is caused by actions that deviate from those as described in the user's manual or by neglect.
 - Damages caused from intervention of unauthorized personnel.
 - Bad or insufficient maintenance.
 - Factors for which the production factory does not have any responsibility (variations in power supply beyond the specifications of the unit, etc.), connection in non-grounded power supply socket etc.
 - All claims for compensation, including consequential damage, will not be entertained.
6. In case of any unit's damage you should refer to the company that sold the unit.
7. The transportation costs from and back to technical department and the probable insurance of the units are under the customer's choice and responsibility.

SMART WI-FI CONNECTION OPERATION GUIDE


APP Binding Device

Search an APP platform for «TuyaSmart» or scan the following QR code to download the APP.



Step 1


Make sure the phone is connected to the Wi-Fi at home, and turn on the Bluetooth device, tap the upper right corner of the home page+ to add device.

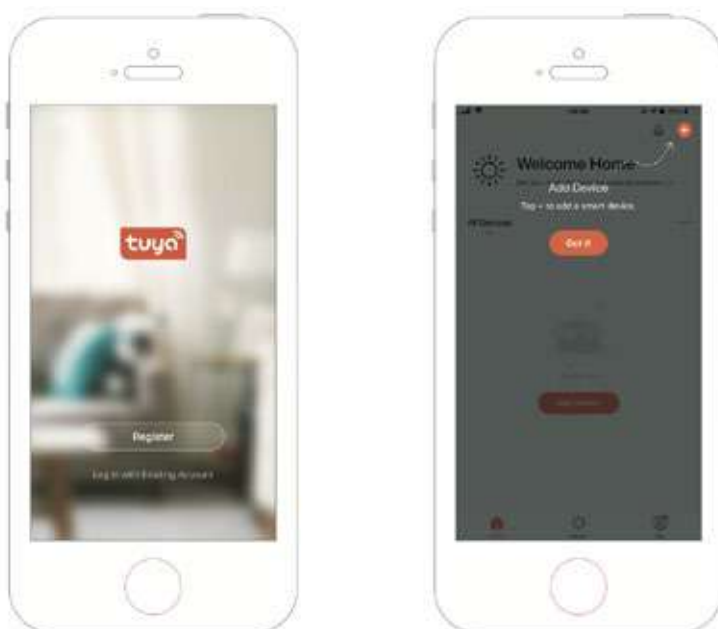

SMART WI-FI CONNECTION OPERATION GUIDE


Step Two

Follow the guide to select the device to be configured, then enter the Wi-Fi password.

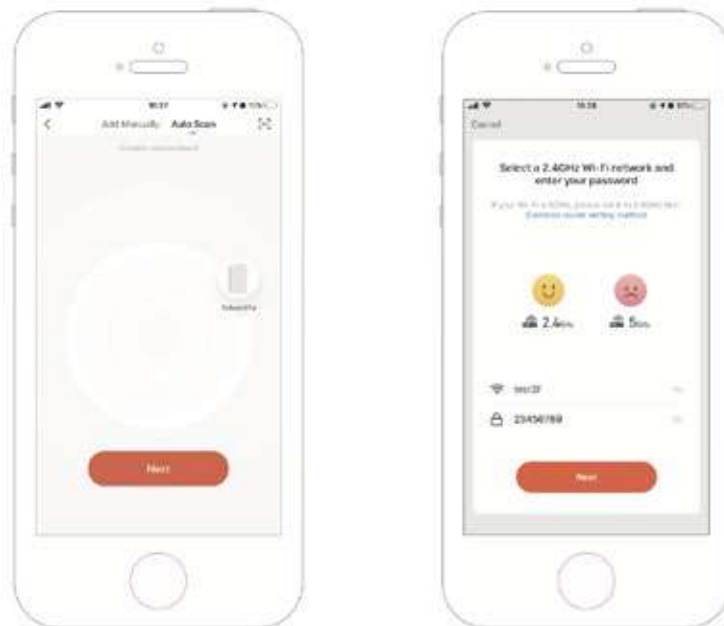

Step 3

Complete the connection to set up the dehumidifier with the app.

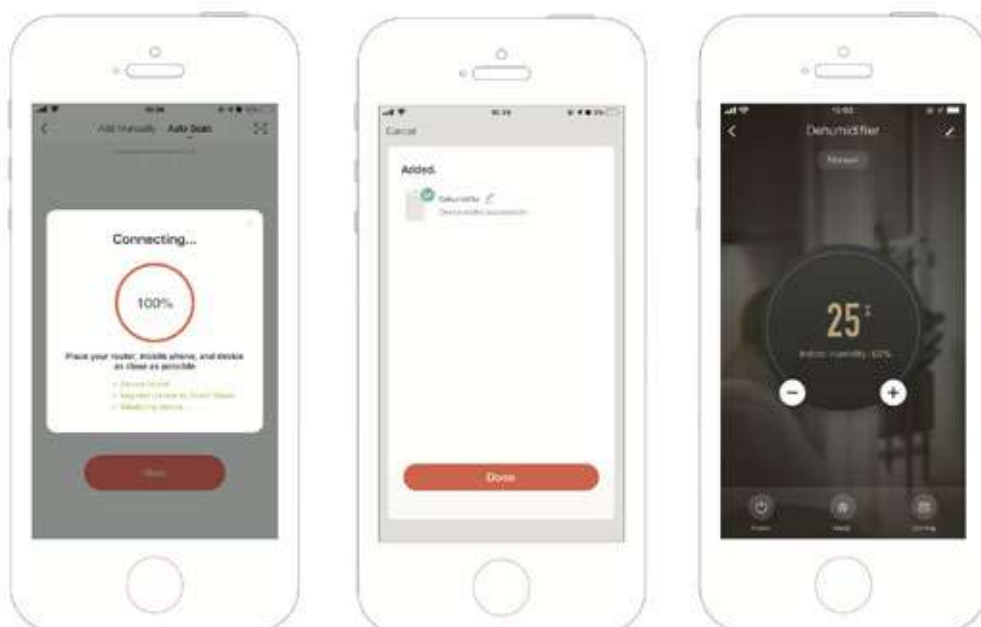


SMART WI-FI CONNECTION OPERATION GUIDE

Adding Device Manually


Step 1

Tap Add Device on the home page or+ in the upper right corner to go to the Add Device page.

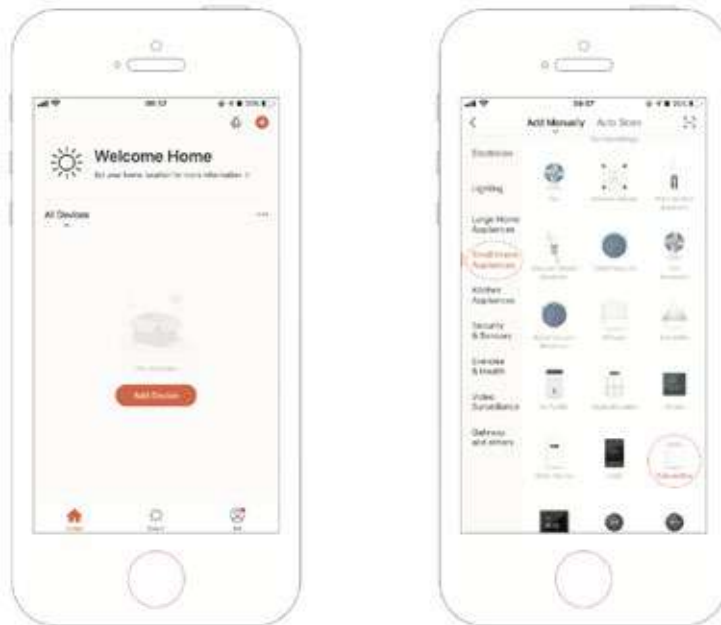

Step 2


Confirm the indicator rapidly blink and enter the Wi-Fi password.

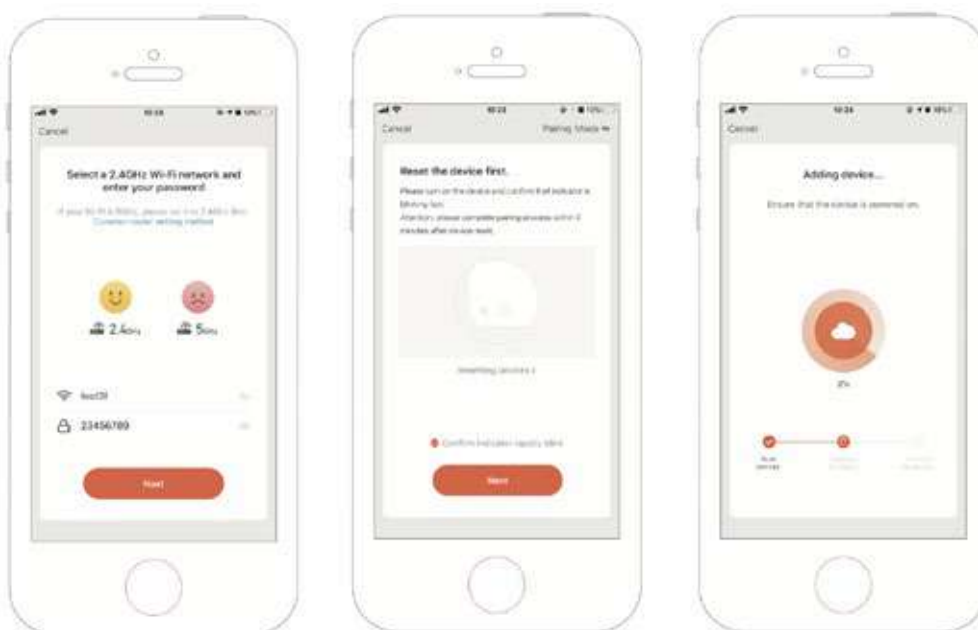

SMART WI-FI CONNECTION OPERATION GUIDE

Step 3

Complete the connection to set the dehumidifier with APP.

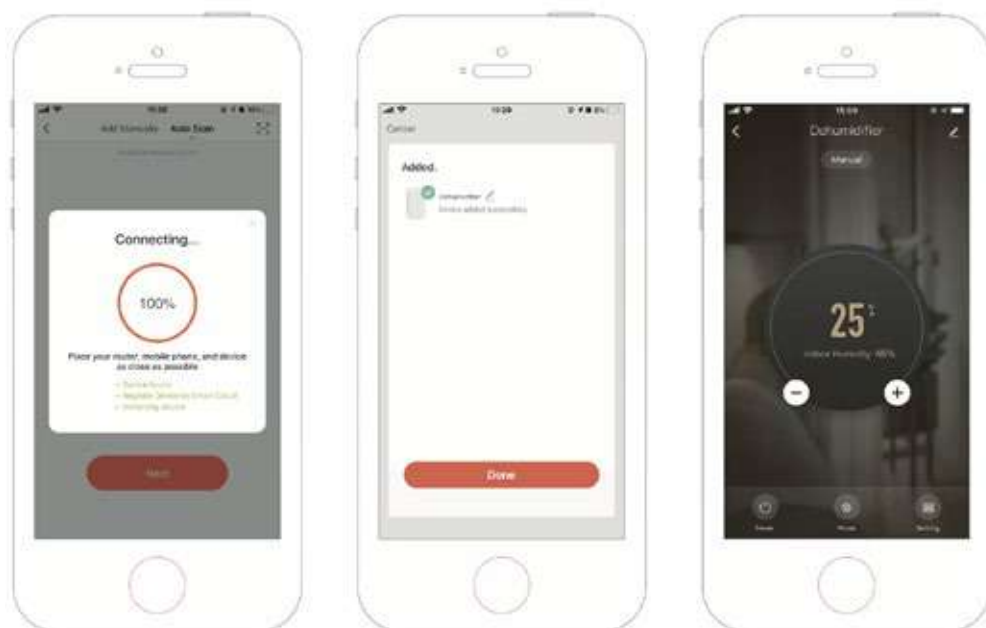



SANI HELLAS IMPORT EXPORT TECHNICAL SA
distributor of Kullhaus products in Greece

Sani hellas
AIR & WATER TREATMENT

SANI HELLAS

IMPORT EXPORT TECHNICAL SA

5-7 Kosti Palama Str.

143 43 Athens, Greece

Tel. (+30) 210 3236627, 3233766

Fax (+30) 210 3247709

e-mail: info@sanihellas.gr

www.sanihellas.gr

www.kullhaus.com